100

finish portion 100C

end-of-line portion 100B

front-of-line portion 100A

130

saw

Frish

SBA 124

plom 120

W/B

D/A 110

126

FIGURE 1

200

<del>.</del> -

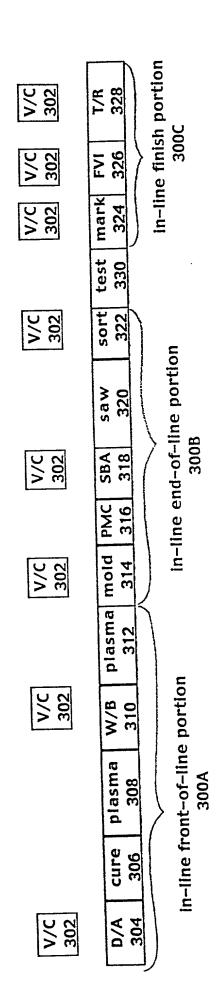


FIGURE 2

٠.

## in-line front-of-line portion 300A

V/C 302 V/C 302

1	D/A	cure	plasma	W/B	plasma
	Ť		308	310	312
	304	306	300	310	

## in-line end-of-line portion 300B

V/C	V/C
302	302

			<u> </u>	· · · · · · · · · · · · · · · · · · ·
mold	PMC	SBA	saw	sort
314	316	318	320	322

V/C 302

## in-line finish portion 300C

V/C 302	V/C 302	V/C 302
mark	FVI	T/R
324	326	328


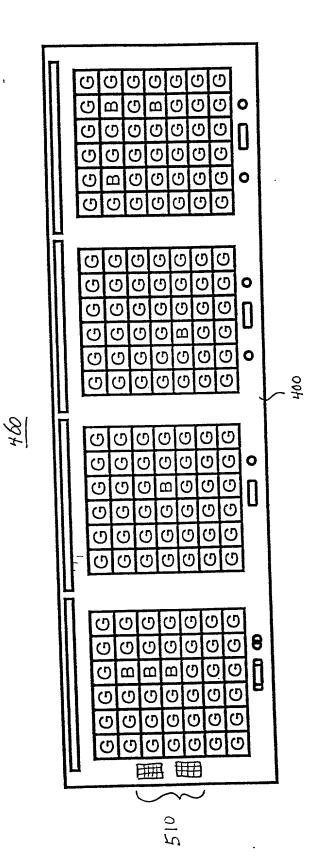



Figure 4

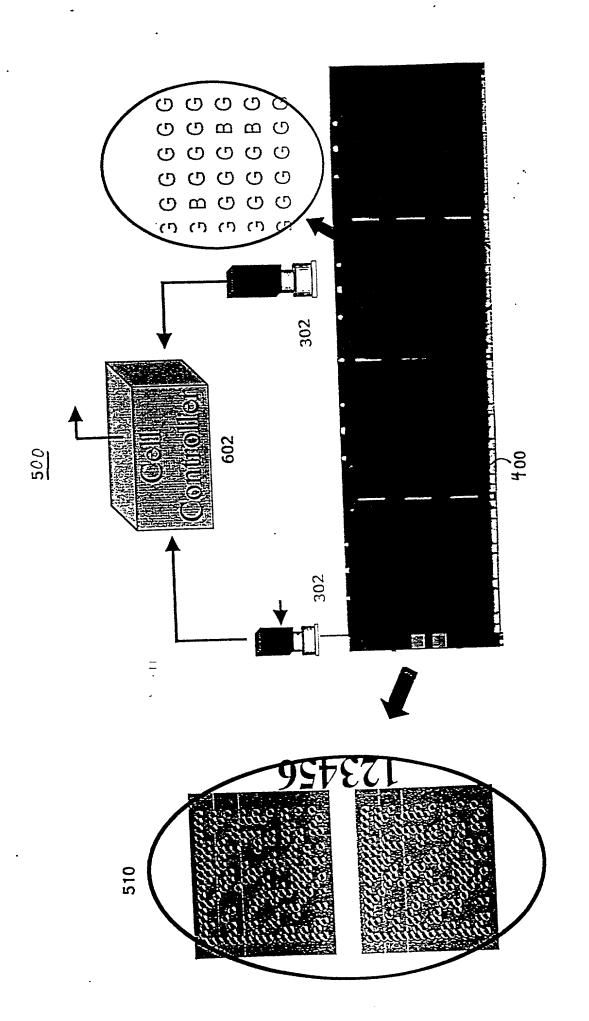

Flgure 5

alle fault half has man of min that the flow flow flow from the fault half half the

FIGURE 6

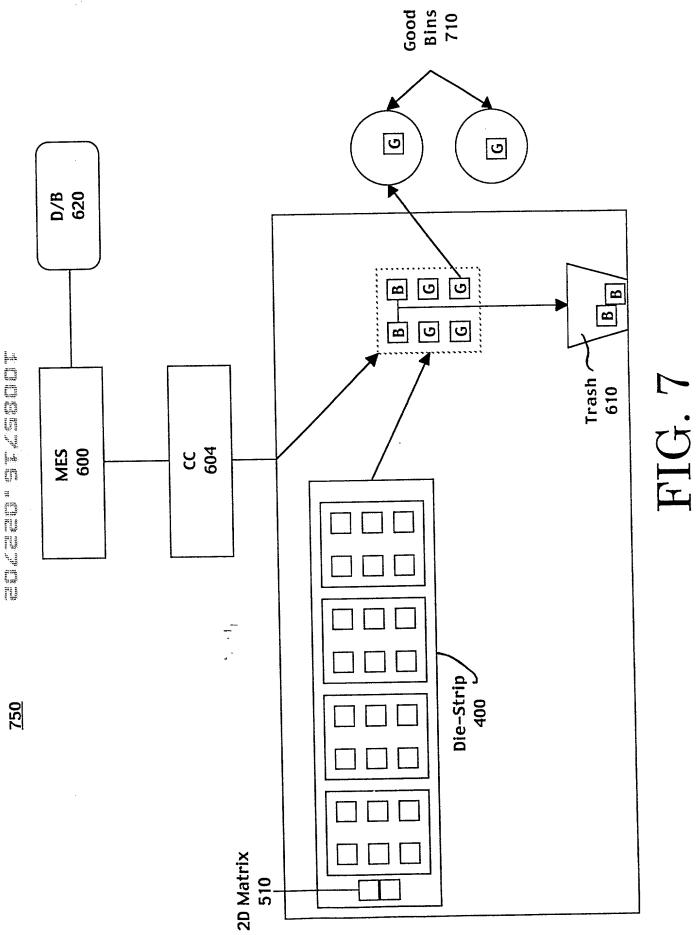

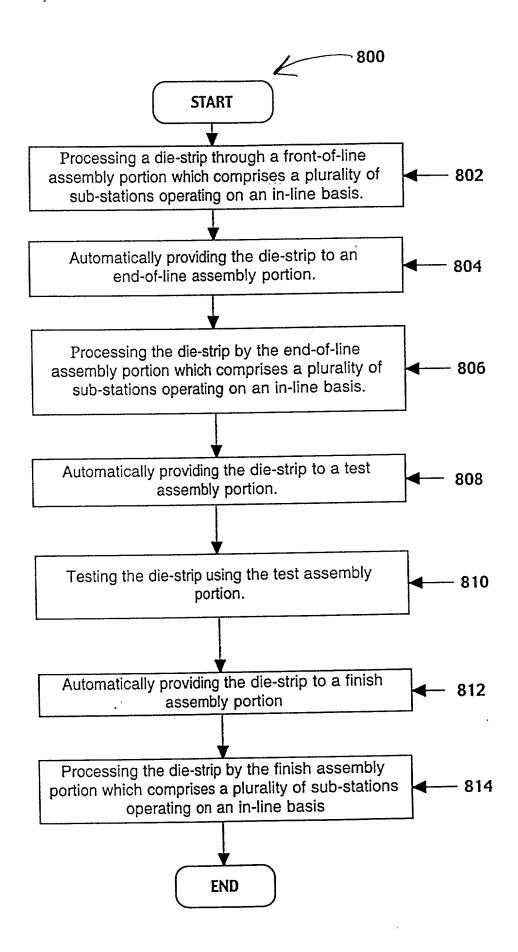
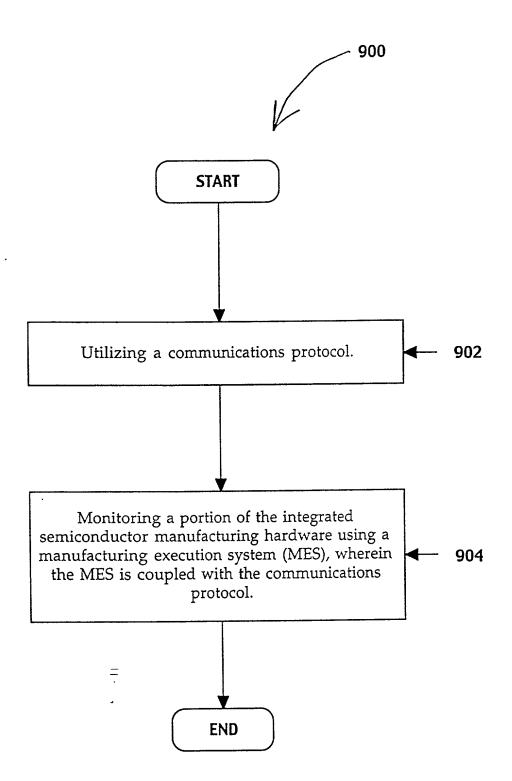


FIGURE 8



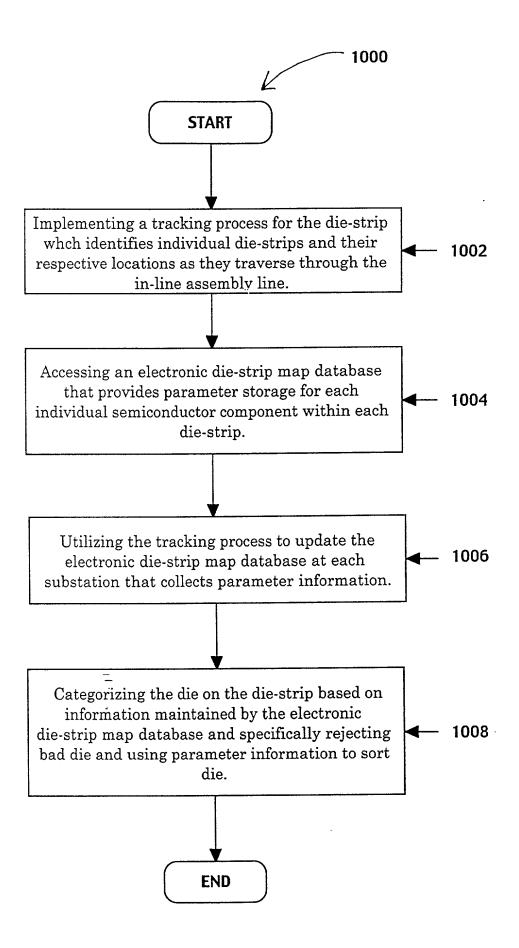


FIGURE 10


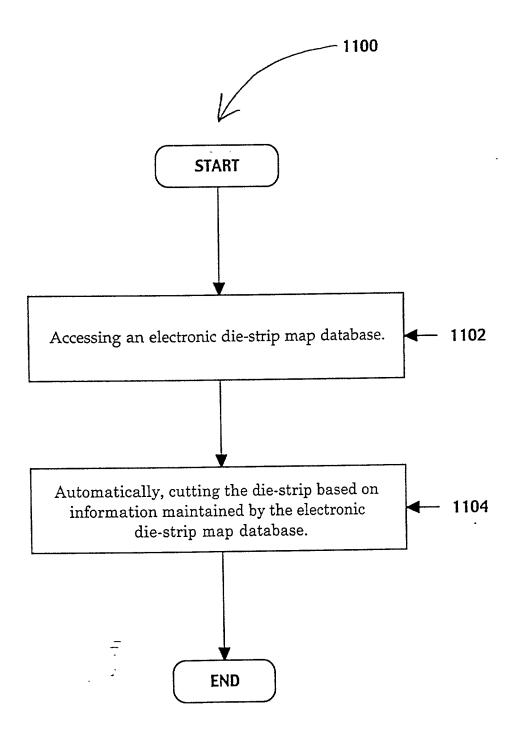


FIGURE 12

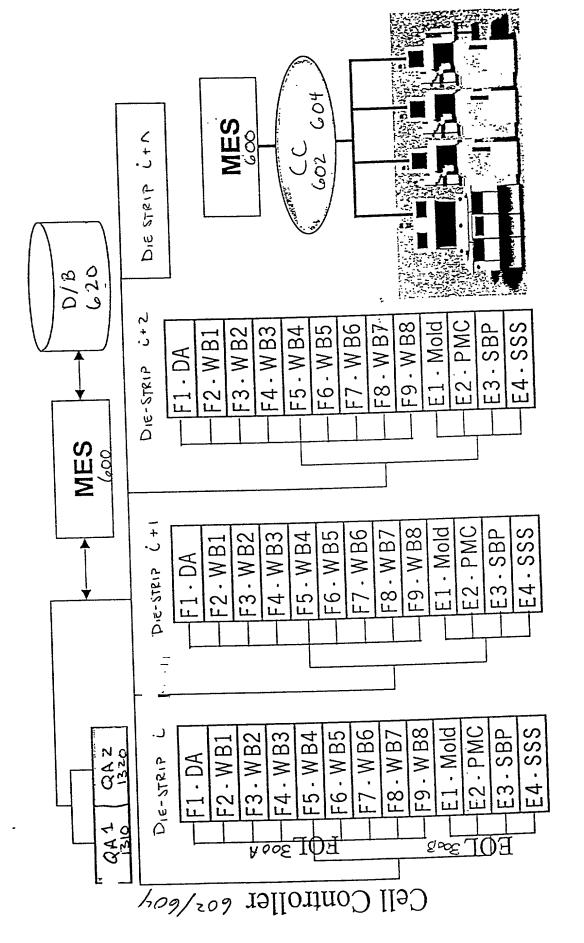

716 13